



ČELIČNE SPOJNICE ZA PNEUMATIKU, SERIE 2000

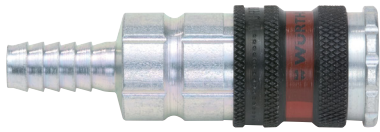


Brza spojnica Serie 2000 sa konektorom za crijevo za Würth PVC- i crijeva za lakiranje

Crijevo-Ø unutrašnji mm	vanjski mm	Dužina mm	Ø mm	Protok zraka l/min.	Art.-Nr.	Pak./kom.
6,0	11,0 - 12,0	67	23	2.100	0699 100 106	3
8,0	14,5 - 16,0	70	23	2.100	0699 100 108	3
9,0	14,5 - 16,0	70	23	2.100	0699 100 109	3
13,0	19,0	68	23	2.100	0699 100 113	3

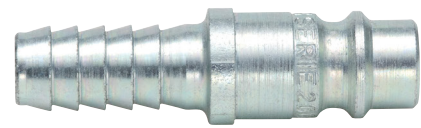


Utična spojnica serije 2000 sa konektorom za crijevo za Würth PVC i crijeva za lakiranje

Crijevo-Ø unutrašnji mm	vanjski mm	Dužina mm	Protok zraka l/min.	Art.-Nr.	Pak./kom.
6,0	11,0/12,0	42	2.100	0699 100 406	3
8,0	14,5/16,0	45	2.100	0699 100 408	3
9,0	14,5/16,0	45	2.100	0699 100 409	3
13,0	19,0	45	2.100	0699 100 413	3

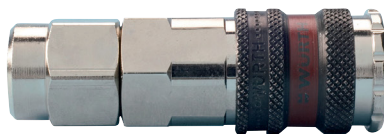


Brza spojnica Serie 2000 sa komformnim konektorom za Würth PU crijeva

Ø crijeva unutrašnji mm	vanjski mm	Dužina mm	Ø mm	Protok zraka l/min.	Art.-Nr.	Pak./kom.
6,5	10,0	64	23	2.100	0699 100 765	3
8,0	12,0	68	23	2.100	0699 100 780	3
11,0	16,0	68	23	2.100	0699 100 711	3

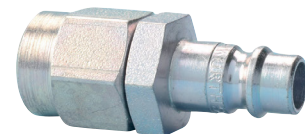


Priključni nipl Serie 2000 sa komformnim priključkom za Würth PU crijeva

Ø crijeva unutrašnji mm	vanjski mm	Dužina mm	Protok zraka l/min.	Art.-Nr.	Pak./kom.
6,5	10,0	44	2.100	0699 100 865	3
8,0	12,0	47	2.100	0699 100 880	3
11,0	16,0	56	2.100	0699 100 811	3

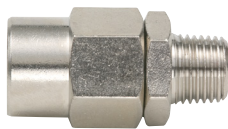

Priključni tuljak Serie 2000 sa komformnim priključkom za Würth PU crijevo, vanjski navoj

Priključci VN R	Crijevo mm	Dužina mm	Otvor ključa mm	Protok zraka l/min.	Art.-Nr.	Pak./kom.
1/4"	8,0 x 12,0	41	19	2.100	0699 100 980	1
1/4"	9,5 x 13,5	43	21	2.100	0699 100 995	1
1/2"	11,0 x 16,0	51	24	3.500	0699 356 007	3

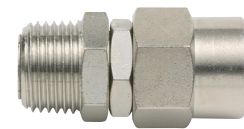

Priključni okretni tuljak Serie 2000 sa komformnim priključkom za Würth PU crijeva, vanjski navoj

Priključci VN R	Crijevo mm	Dužina mm	Protok zrak l/min.	Art.-Nr.	Pak./kom.
1/4"	6,5 x 10,0	44	1.500	0699 100 914	3
3/8"	8,0 x 12,0	46	2.100	0699 100 938	3
1/2"	11,0 x 16,0	51	3.500	0699 100 912	3

Priključak za Würth PVC crijeva i crijeva za lakiranje



O stezaljku gurnuti preko crijeva..



Potom, uz lagano obrtanje, gurnuti crijevo na tuljak do graničnika.




O-stezaljkom pritegnuti.

Komforni priključak za Würth PU crijeva



Odvnuti čahuru za blokadu i gurnuti je preko crijeva



Potom, uz lagano obrtanje, gurnuti crijevo na tuljak do graničnika.



Zatim pritegnuti čahuru za blokadu do graničnika.